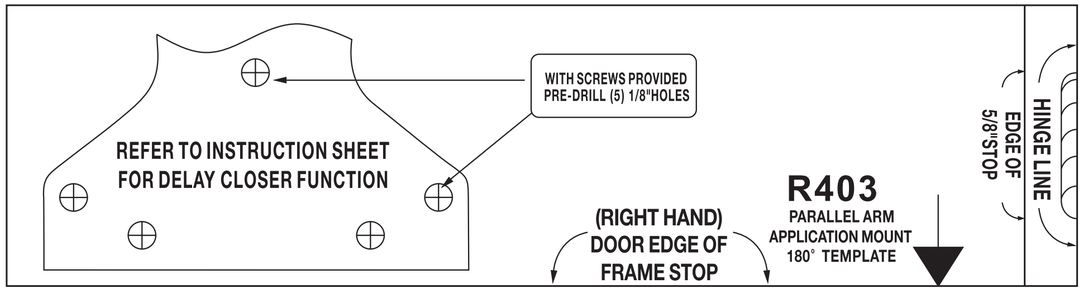
WITH SCREWS PROVIDED
PRE-DRILL (5) 1/8"HOLES
REFER TO INSTRUCTION SHEET
FOR DELAY CLOSER FUNCTION
(RIGHT HAND)
DOOR EDGE OF
FRAME STOP
R403
PARALLEL ARM
APPLICATION MOUNT
180° TEMPLATE
EDGE OF
5/8"STOP
HINGE LINE

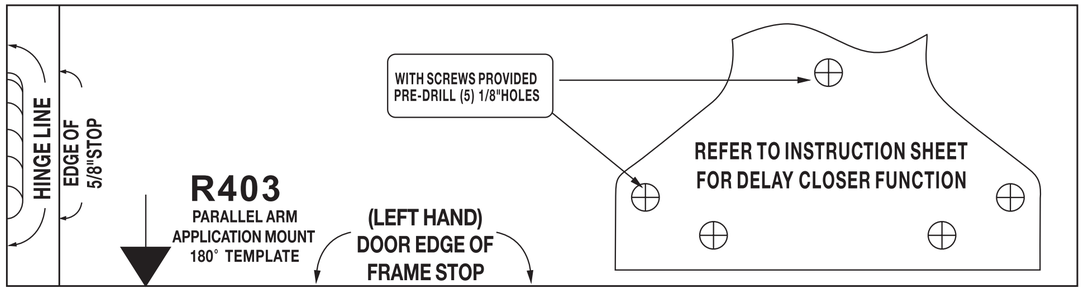
HINGE LINE
EDGE OF
5/8"STOP
WITH SCREWS PROVIDED
PRE-DRILL (5) 1/8"HOLES
REFER TO INSTRUCTION SHEET
FOR DELAY CLOSER FUNCTION
R403
PARALLEL ARM
APPLICATION MOUNT
180° TEMPLATE
(LEFT HAND)
DOOR EDGE OF
FRAME STOP

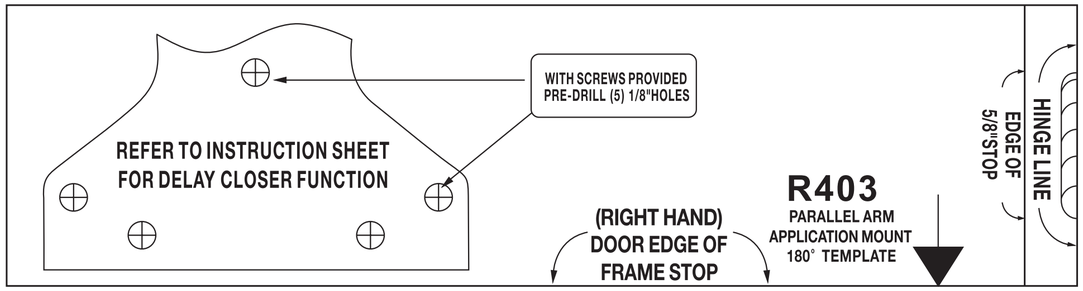
WITH SCREWS PROVIDED
PRE-DRILL (5) 1/8"HOLES
REFER TO INSTRUCTION SHEET
FOR DELAY CLOSER FUNCTION
(RIGHT HAND)
DOOR EDGE OF
FRAME STOP
R403
PARALLEL ARM
APPLICATION MOUNT
180° TEMPLATE
EDGE OF
5/8"STOP
HINGE LINE

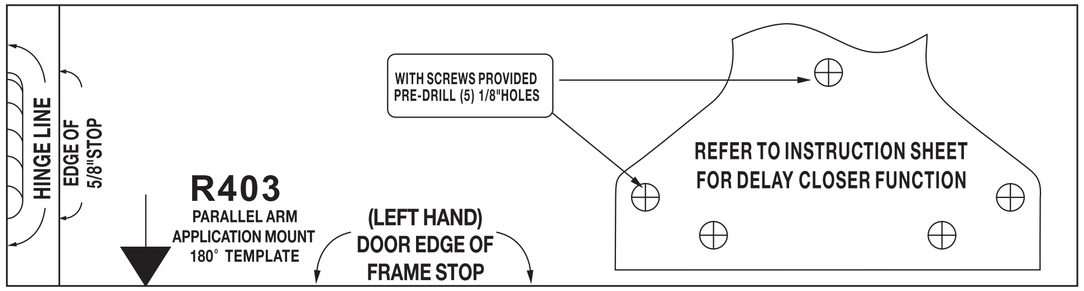
HINGE LINE
EDGE OF
5/8"STOP
WITH SCREWS PROVIDED
PRE-DRILL (5) 1/8"HOLES
REFER TO INSTRUCTION SHEET
FOR DELAY CLOSER FUNCTION
R403
PARALLEL ARM
APPLICATION MOUNT
180° TEMPLATE
(LEFT HAND)
DOOR EDGE OF
FRAME STOP

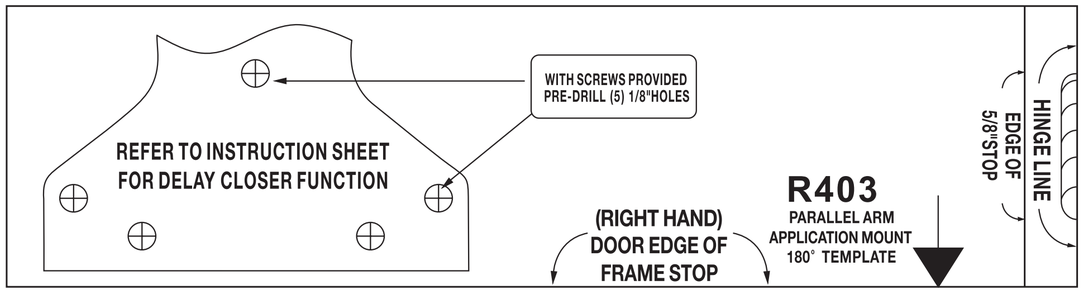
WITH SCREWS PROVIDED
PRE-DRILL (5) 1/8"HOLES
REFER TO INSTRUCTION SHEET
FOR DELAY CLOSER FUNCTION
(RIGHT HAND)
DOOR EDGE OF
FRAME STOP
R403
PARALLEL ARM
APPLICATION MOUNT
180° TEMPLATE
EDGE OF
5/8"STOP
HINGE LINE

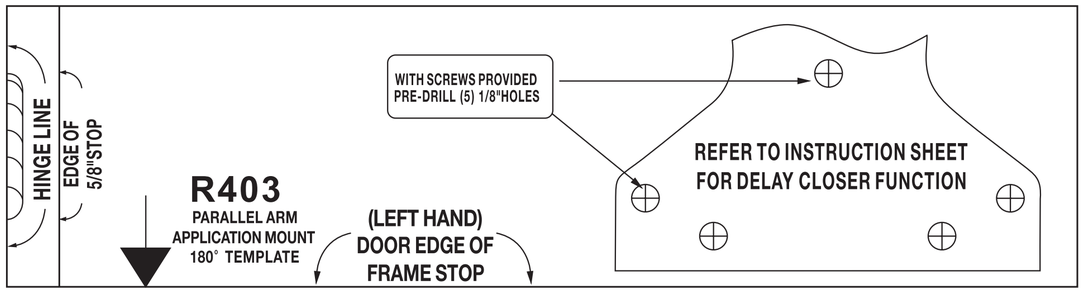
HINGE LINE
EDGE OF
5/8"STOP
WITH SCREWS PROVIDED
PRE-DRILL (5) 1/8"HOLES
REFER TO INSTRUCTION SHEET
FOR DELAY CLOSER FUNCTION
R403
PARALLEL ARM
APPLICATION MOUNT
180° TEMPLATE
(LEFT HAND)
DOOR EDGE OF
FRAME STOP

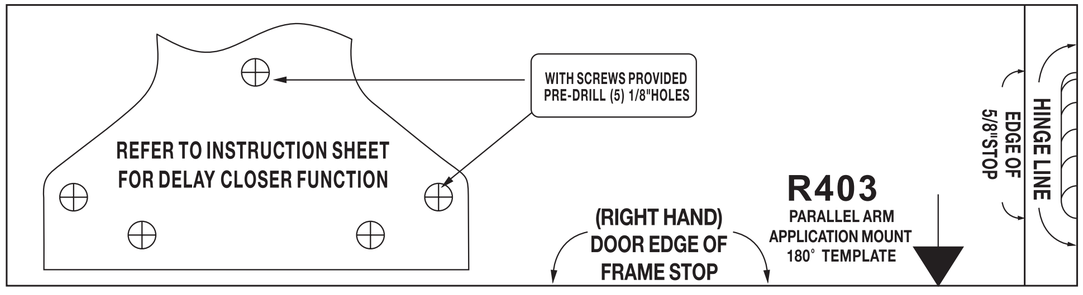
WITH SCREWS PROVIDED
PRE-DRILL (5) 1/8"HOLES
REFER TO INSTRUCTION SHEET
FOR DELAY CLOSER FUNCTION
(RIGHT HAND)
DOOR EDGE OF
FRAME STOP
R403
PARALLEL ARM
APPLICATION MOUNT
180° TEMPLATE
EDGE OF
5/8"STOP
HINGE LINE

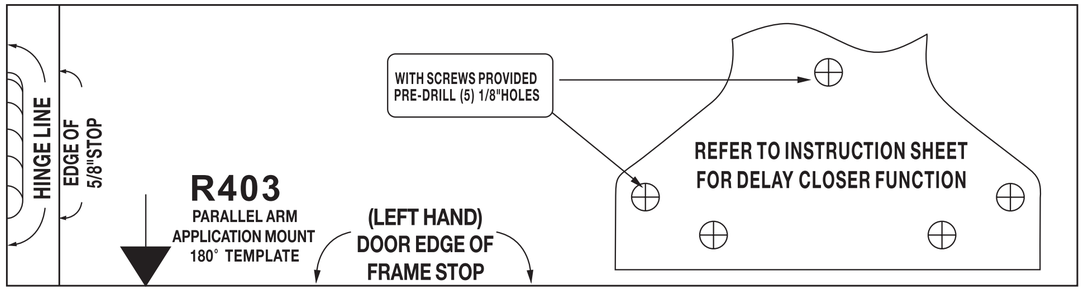
HINGE LINE
EDGE OF
5/8"STOP
WITH SCREWS PROVIDED
PRE-DRILL (5) 1/8"HOLES
REFER TO INSTRUCTION SHEET
FOR DELAY CLOSER FUNCTION
R403
PARALLEL ARM
APPLICATION MOUNT
180° TEMPLATE
(LEFT HAND)
DOOR EDGE OF
FRAME STOP

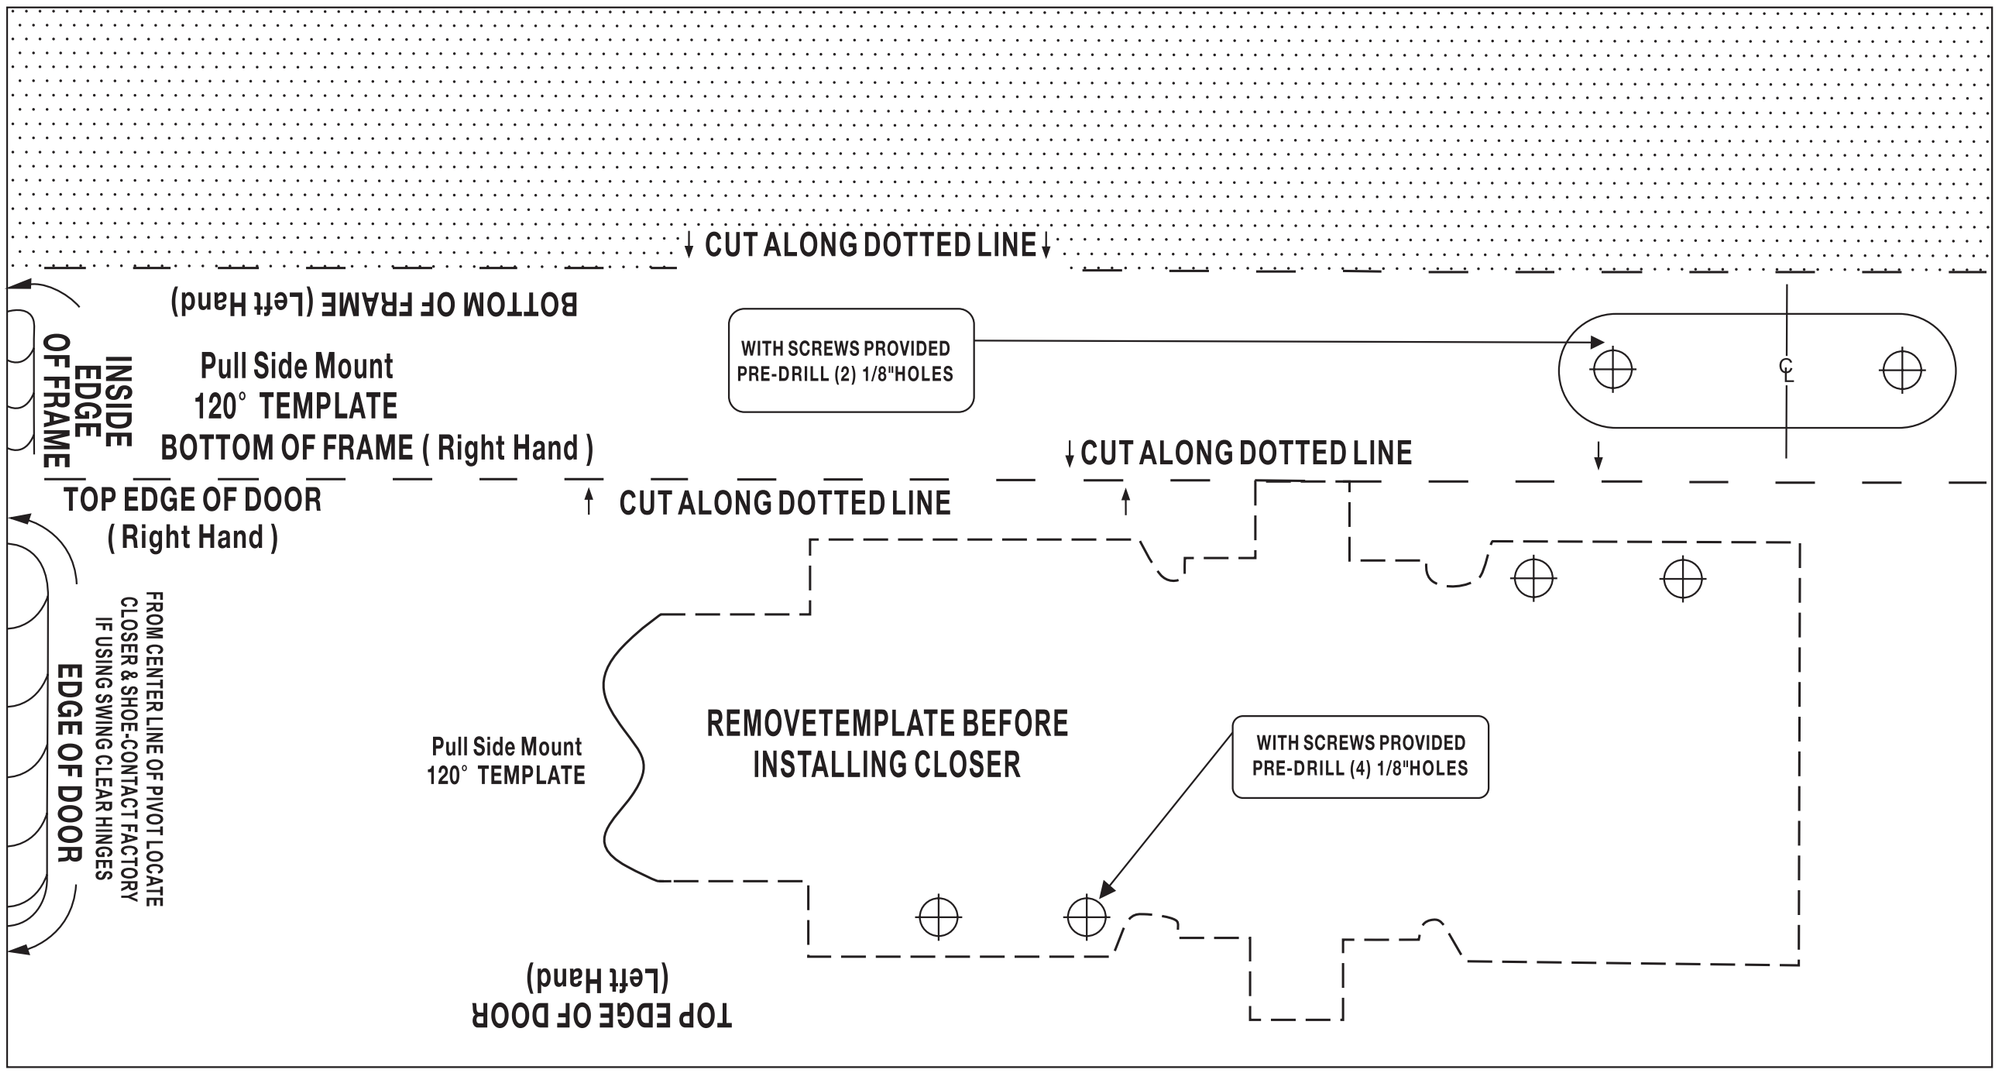

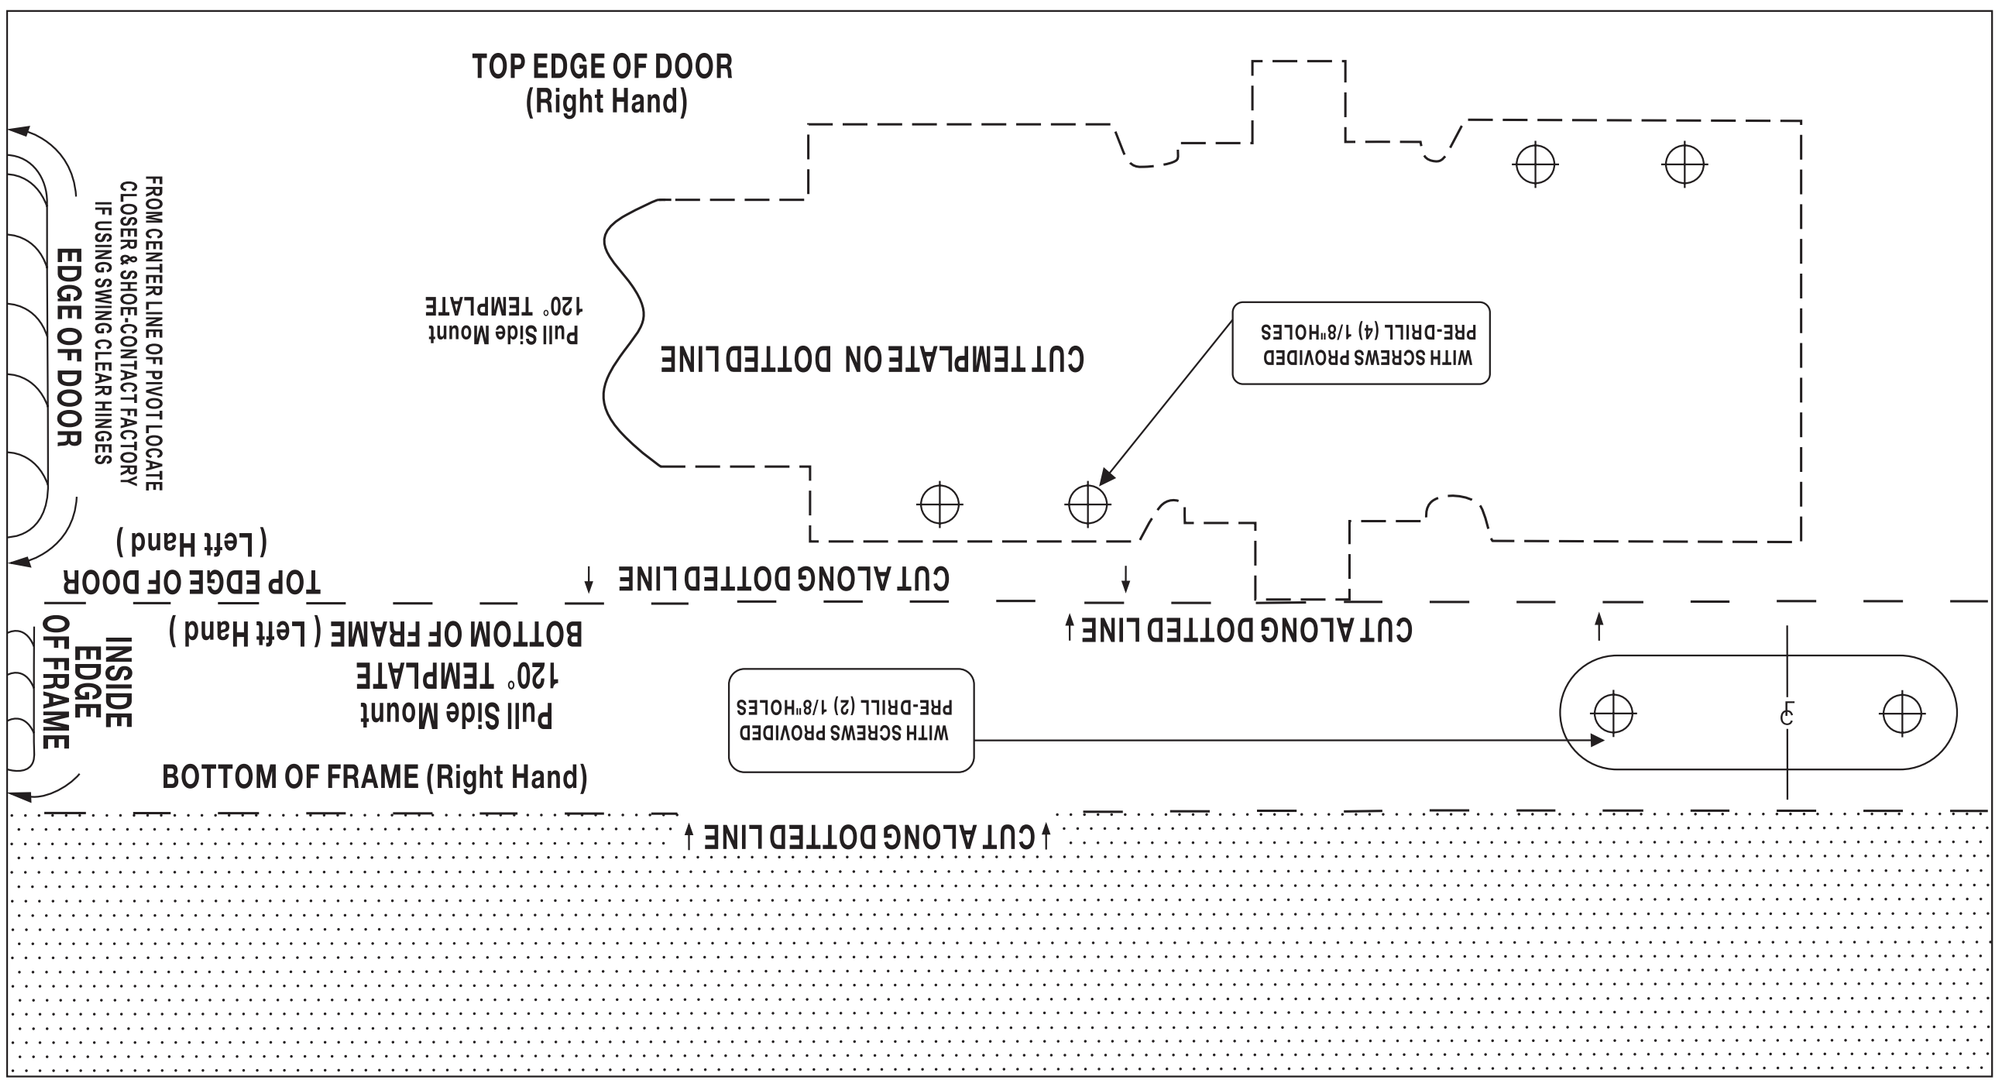

咬口 双面印刷（左右自翻） 成品尺寸：380*210mm 切纸尺寸：440*394mm（大度六开）
普通 OB03 说明书 第二款 2022-10-27

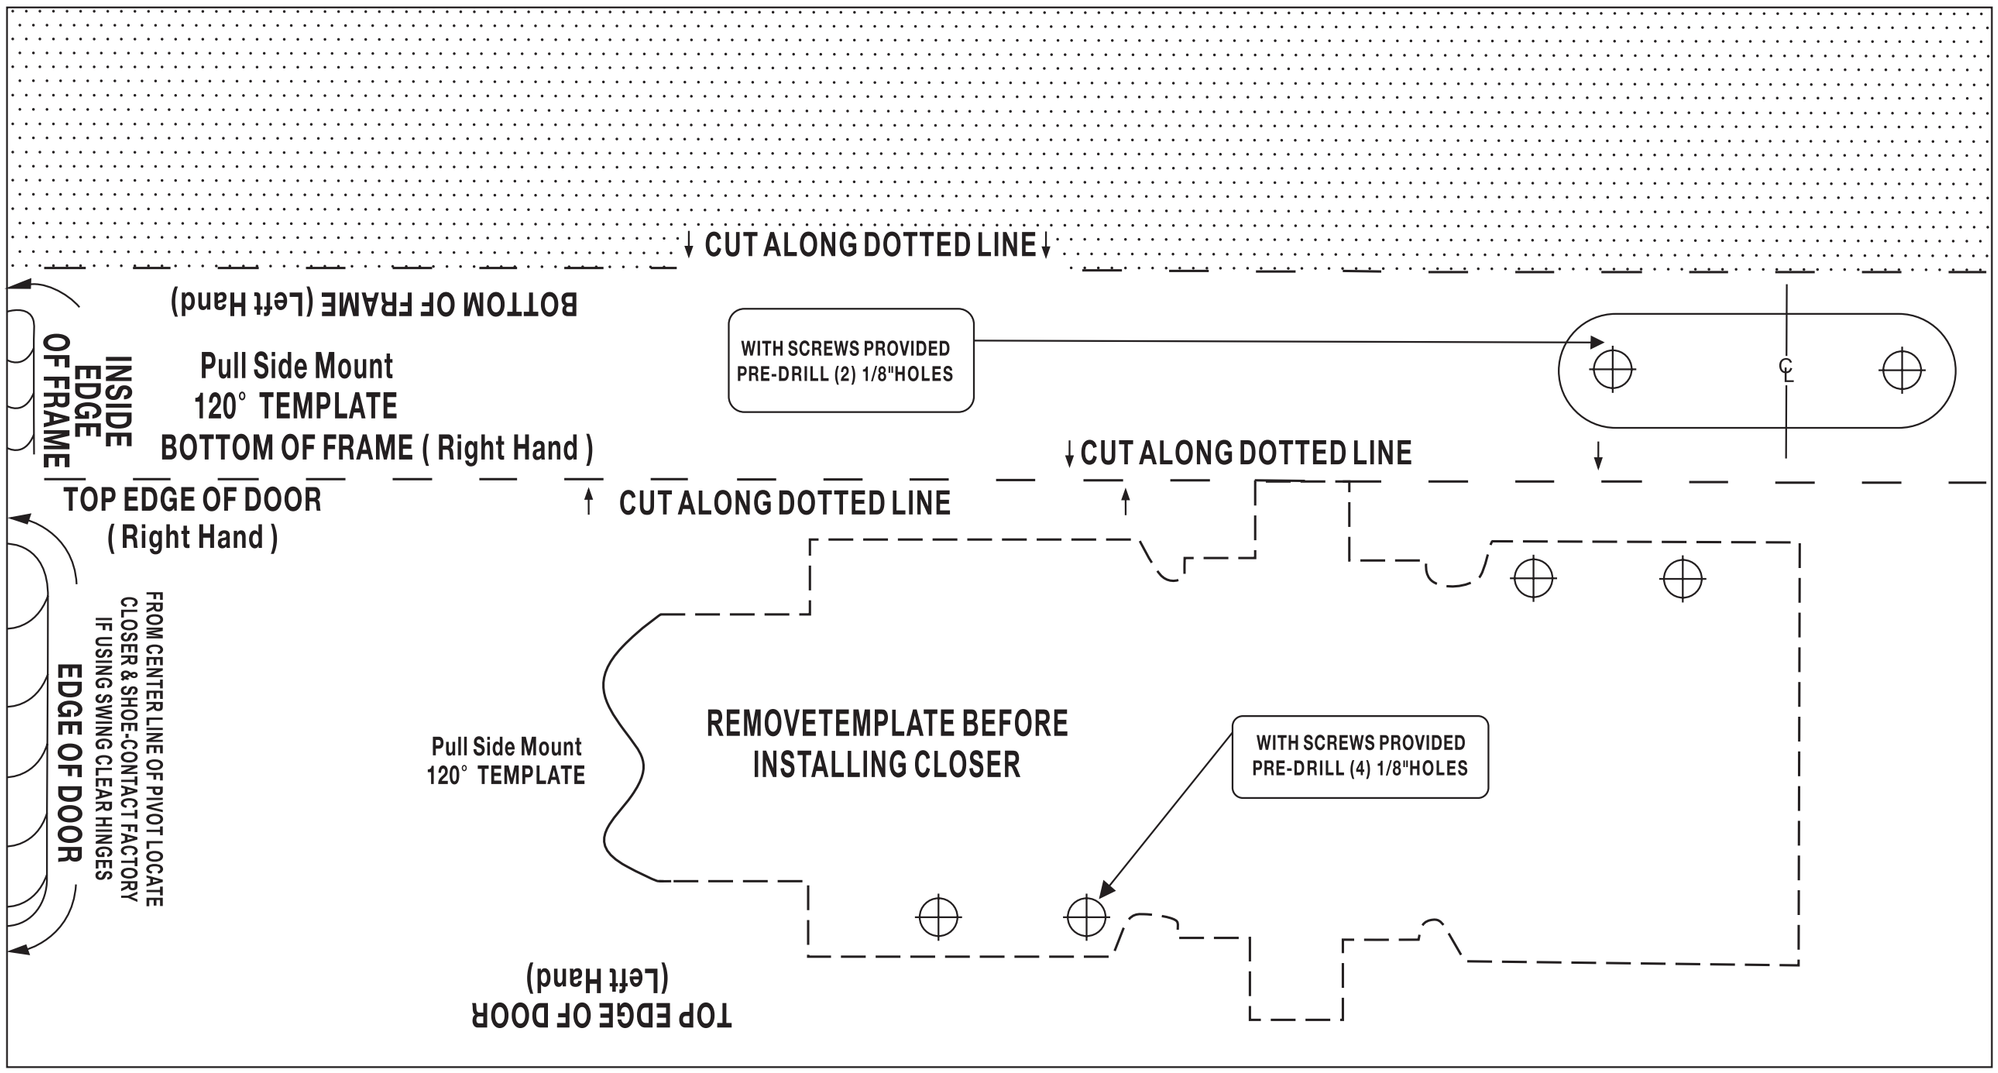

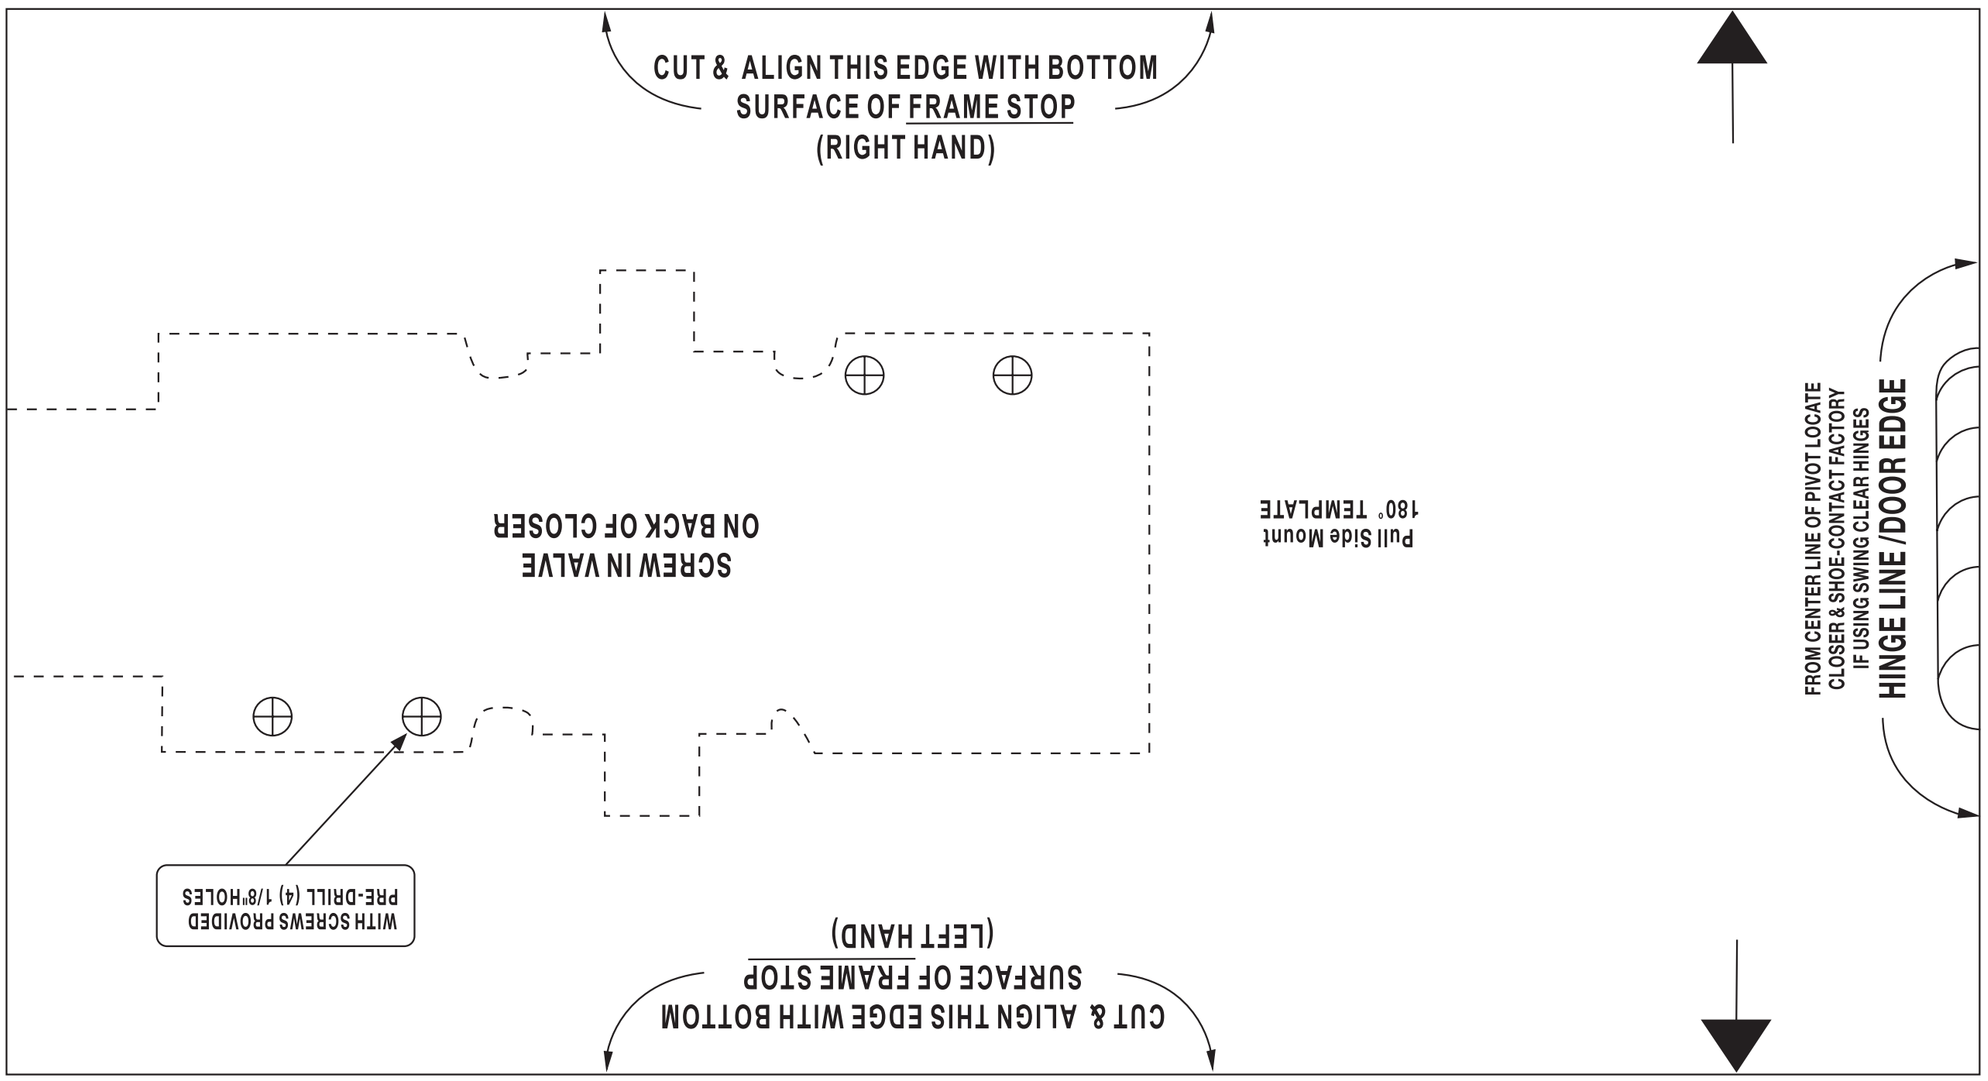

咬口 双面印刷（左右自翻） 成品尺寸：380*210mm 切纸尺寸：440*394mm（大度六开）
普通 OB03 说明书 第三款 2022-10-27